

# 5G Keyboard System with Clip Mouse User Instructions



## Keyboard Depth Adjustment

Your 5G Keyboard System slides on a track. To use your keyboard system, simply slide it out from under the desk. To put it away, simply slide your keyboard system back under the desk.



# 5G Keyboard System with Clip Mouse User Instructions



## Keyboard Height Adjustment

To raise the height of your keyboard system, lift the front edge of the keyboard platform, raise to desired height and release. It will automatically lock in place. To lower, tilt the platform from the front edge, lower to desired position and release.

*Ergo Tip: Adjust keyboard height to within 1 inch of seated elbow height while maintaining clearance between the bottom of the platform and the thighs.*



# 5G Keyboard System with Clip Mouse User Instructions



## Keyboard Angle Adjustment

To change the angle of your keyboard platform, locate the adjustment dial and turn to desired angle.

*Ergo Tip: Set the keyboard angle such that your wrists are straight while your palms are positioned on the palm support. For most users, the ideal angle will be between  $-5$  and  $-10$  degrees.*



# 5G Keyboard System with Clip Mouse User Instructions



## Clip Mouse Horizontal Adjustment

The Clip Mouse can be moved closer to or further away from you by simply sliding it forward or back. Grasping the unit near the Rail will facilitate the sliding action. The Clip Mouse can also be adjusted laterally by rotating it around its offset pivot point.

*Ergo Tip: Position the Clip Mouse so that you can easily reach the mouse by simply swinging your forearm from the center of the keyboard. As with keying, you should be able to mouse with your shoulders relaxed and your arms hanging comfortably at your sides.*



# 5G Keyboard System with Clip Mouse User Instructions



## Clip Mouse Height Adjustment

The Clip Mouse can be positioned at one of two heights – either above the keyboard’s numeric keypad or at keyboard height. To adjust the Clip Mouse from the low position to the high position, simply lift the platform and push towards the keyboard until the platform locks into place. To adjust the Clip Mouse from the high position to the low position, pull the platform away from the keyboard. The platform will automatically lower to keyboard height.

*Ergo Tip: In situations where the numeric pad is not often utilized, it is recommended that the Clip Mouse be set in the higher position, with the mouse platform swiveled over the numeric pad to minimize reaching for the mouse.*



# 5G Keyboard System with Clip Mouse User Instructions



## Clip Mouse Angle Adjustment

If the keyboard platform is set to a tilt, the Clip Mouse platform can be adjusted so that the mousing surface is parallel to the floor. Simply grasp front edge of the Clip Mouse platform and move it up or down to achieve desired angle.



## Clip Mouse Left/Right Use

The Clip Mouse may be used on either the left or right side of the keyboard to accommodate left- or right-handed users, or to periodically alternate the mousing hand. To move the Clip Mouse from one side of the keyboard to the other, slide it all the way back until it slides off the rail. Turn it 180 degrees and slide it onto the back of the opposite rail.

